


ASSEMBLY AND INSTALLATION INSTRUCTIONS

L0005 / L0006

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

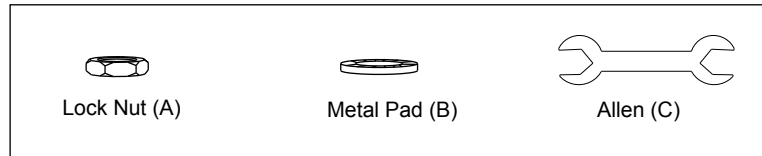


Warning: LED electronics can be damaged by electro static discharge (ESD) shock. Before installation, discharge yourself by touching a grounded bare metal surface to remove this hazard. To avoid damage, do not touch the LED module.


Installation Steps


1. Attach the column into the hole of base and tighten it with metal pad and lock nut.
2. Pull the fixture wires and insert the arm into the hole of column and tighten it with set screw.
Make sure the screw hole of column aligns with threaded hole of arm and arm in the middle of the base.

Adjusting the length of the inner arm (Fig.1,2,3)

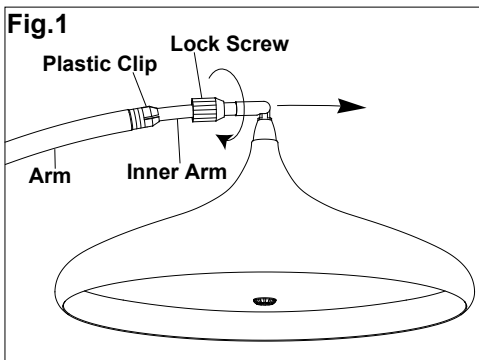


3. Unscrew the lock screw from the arm to slide the inner arm from the arm. (Fig.1)
Note: Hold the inner arm up for succeeding in unscrewing lock screw and to prevent it from scuffing.

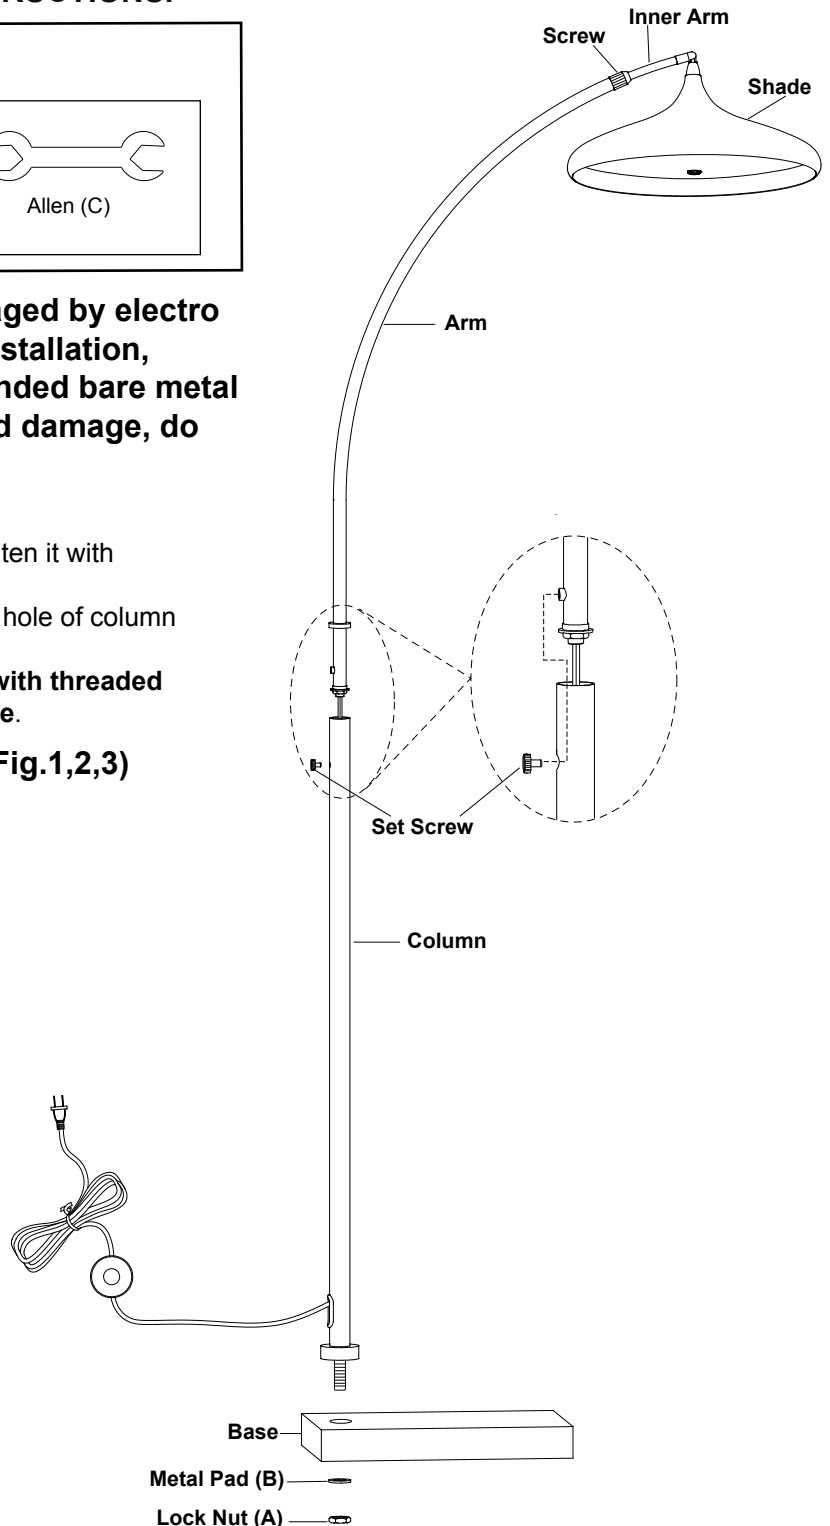

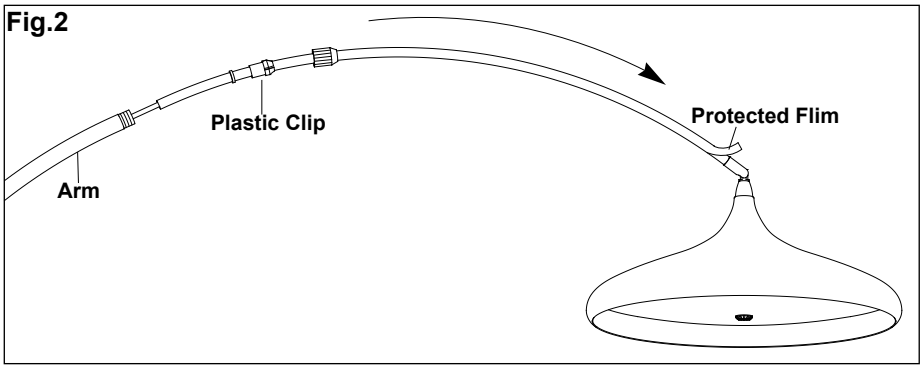

4. Pull the inner arm out from arm completely and another person pull the the fixture wires. Then remove the protected film from the inner arm. (Fig.2)

Note: Hold the plastic clip to prevent inner arm from scuffing .

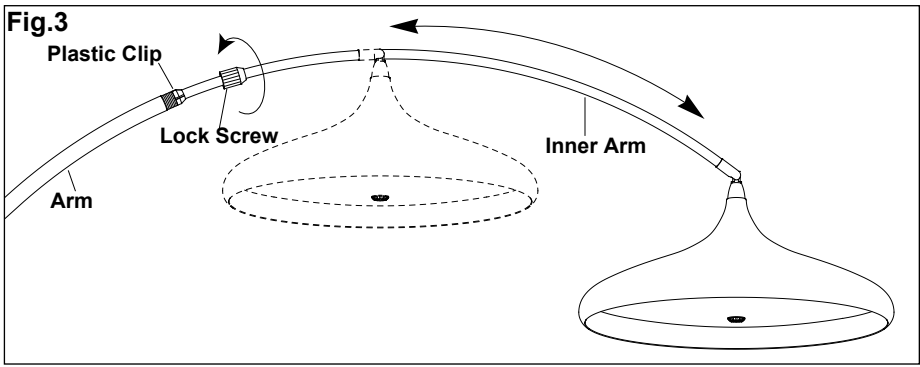

5. Insert the inner arm into the arm and slide the plastic clip back into the arm to prevent the inner arm from scuffing. Place the inner arm to the desired location and tighten lock screw back to arm. (Fig.3)

Note: Hold the inner arm up for succeeding in screwing lock screw and to prevent it from scuffing.

Note: Restore the plastic clip as sooner to prevent inner arm from scuffing.

Note: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Function and Operation

ON-OFF

TURNING LIGHTS ON, OFF
Wave hand under 4 inches of sensor once to turn light on or off.

DIMMING







DIMMING LIGHTS
Hold hand under 4 inches of sensor to adjust brightness.
NOTE: Dimming ranges from 100% to 5% brightness.

LOCK-UNLOCK

LOCK / UNLOCK LIGHT
Wave hand under 4 inches of sensor within 0.5 seconds twice to lock or unlock sensor.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

					
Lock Nut (A)	Metal Pad (B)	Mounting Hardware 5763MM(1 SET)	Set Screw X1 5761SS for L0005 5762SS for L0006	PC Diffuser X1 9865AC	Lock Ring X1 7151LR

5-YEAR LIMITED WARRANTY:

All products are warranted to be free of defects in material and workmanship for five (5) years from date of purchase. This warranty is limited to the correction of any such defect, or the replacement of any such defective item(s), provided that: (a) we are properly notified and consent to return of the item(s) in question:(b) the item(s) is / are returned with proof of purchase date; and (c) it is found upon inspection by us that the item(s) is / are defective as noted above. This warranty does not cover labor costs, consequential damages, nor does it apply to any item(s) that have been improperly installed, overloaded, altered, or otherwise abused by the customer, its agent(s) or employee(s). Finishes are specially excluded from the terms of this warranty since they are subject to environmental maintenance deemed beyond our control. Other than the described obligation, we assume no further liability with respect to the sale or use of our products. We make no warranty, express or implied, and disclaim any warranty of merchantability or fitness for a particular purpose.

